

KGL-MM COVCO-20

OPEN CLOSE OPEN_CAL CLOSE_CAL

POWER UPDATE OVER CURRENT ERR. PULSE ERR. CALIBRATION MESSAGE COMMUNICATION ERR. DECK LOCATION ERR.

4.0A T

LIGHT CONTACT

DECK STOP

LOCK

DECK

OPEN

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK

STOP

DECK


STOP

DECK


STOP

DECK


STOP

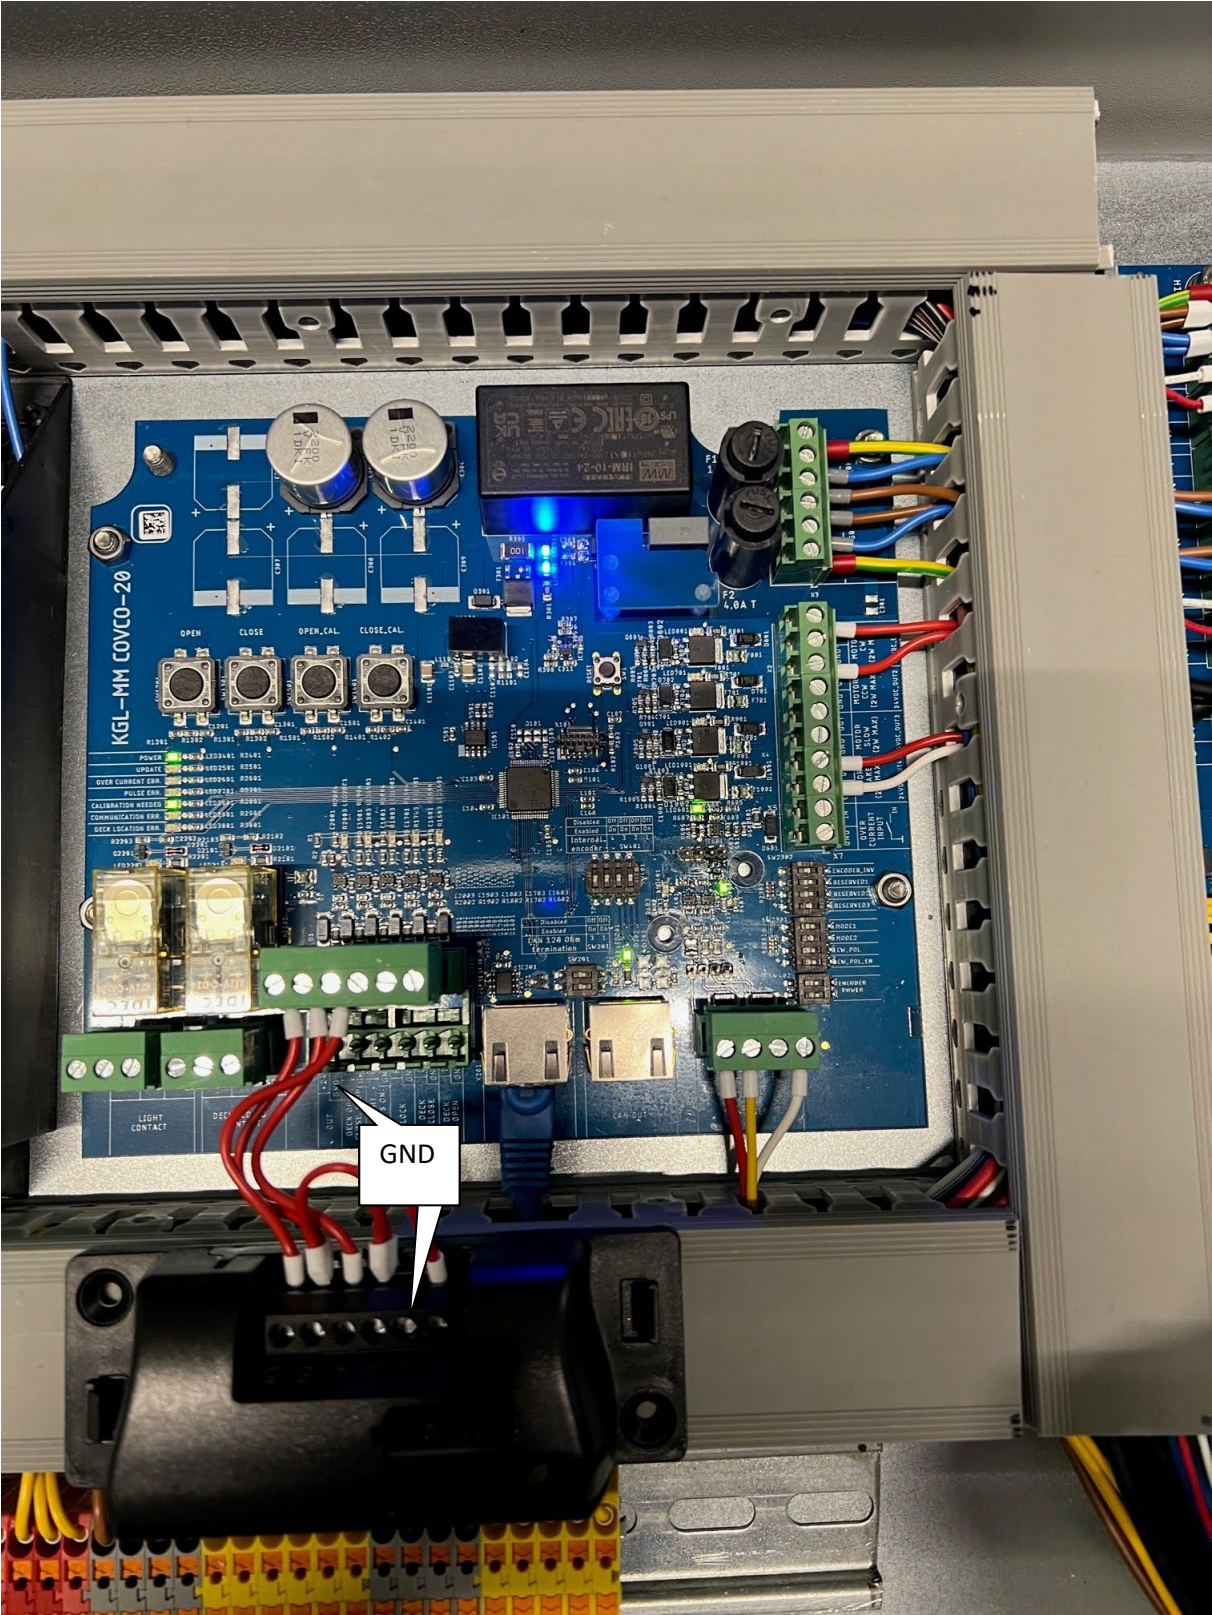

GND

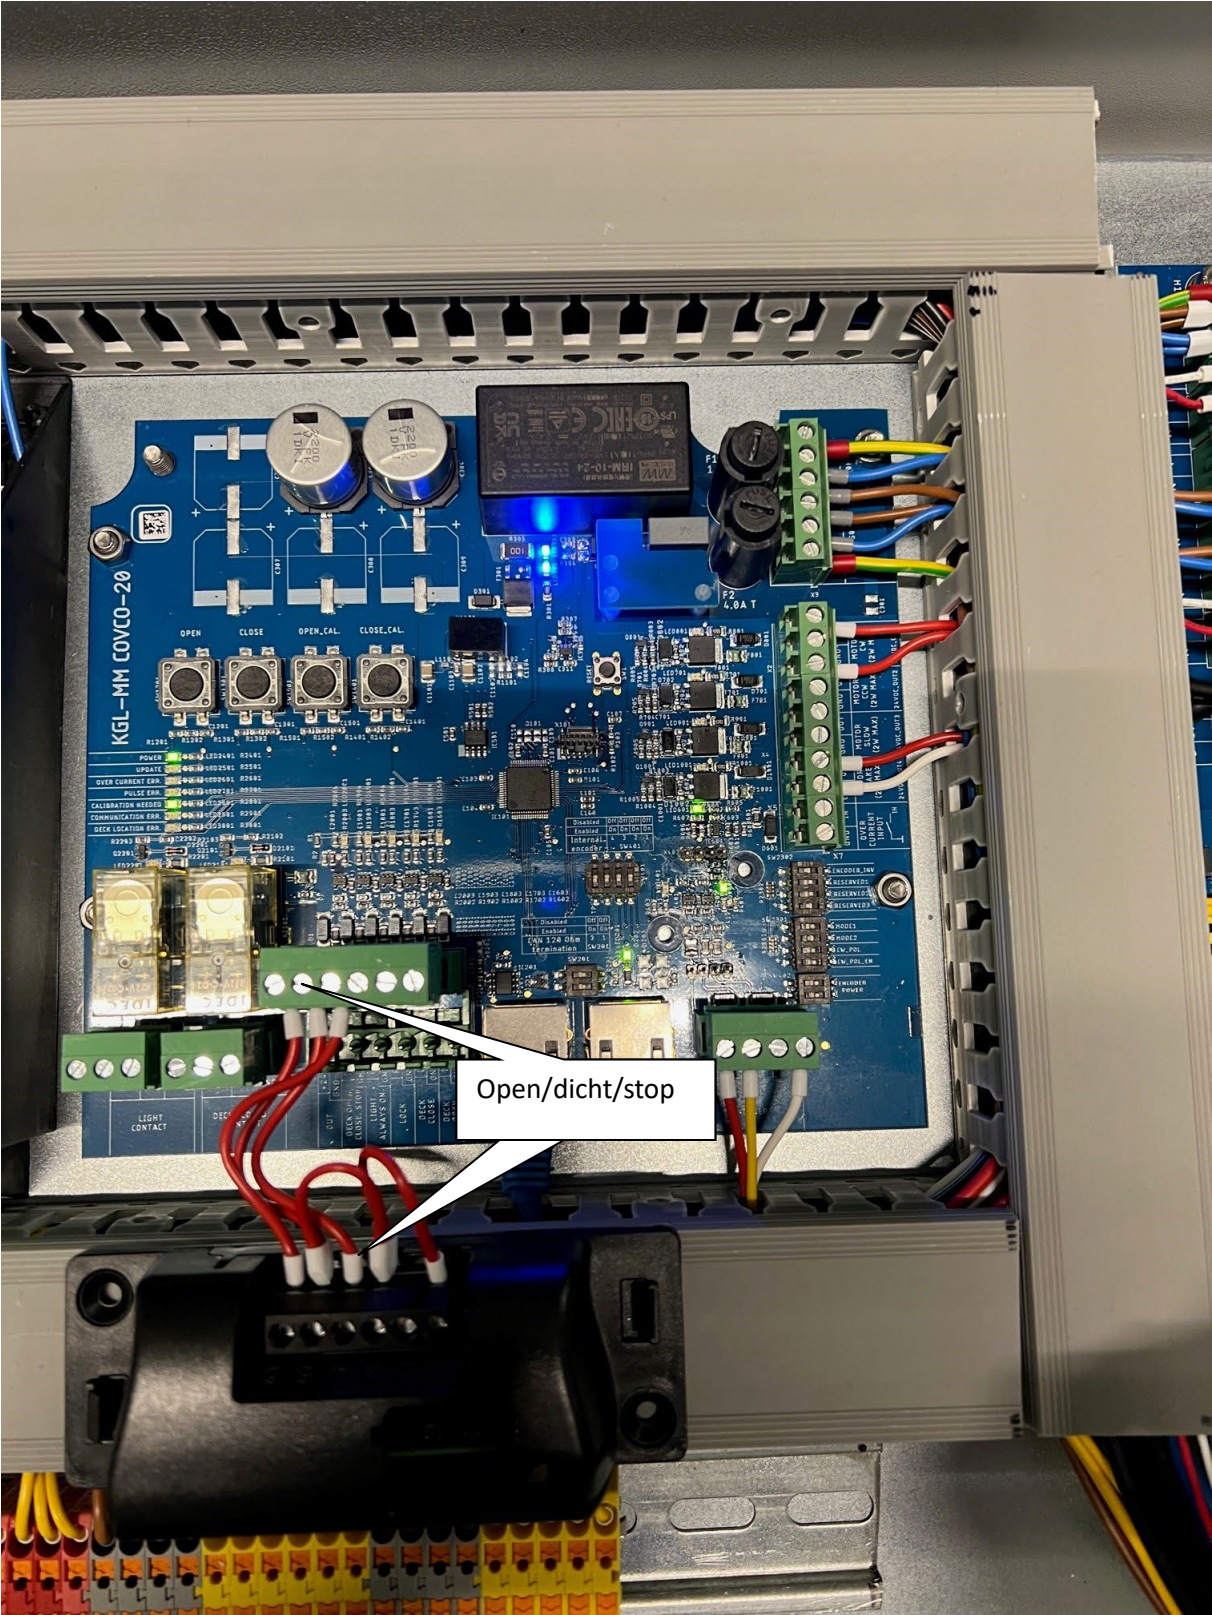

Open/dicht/stop

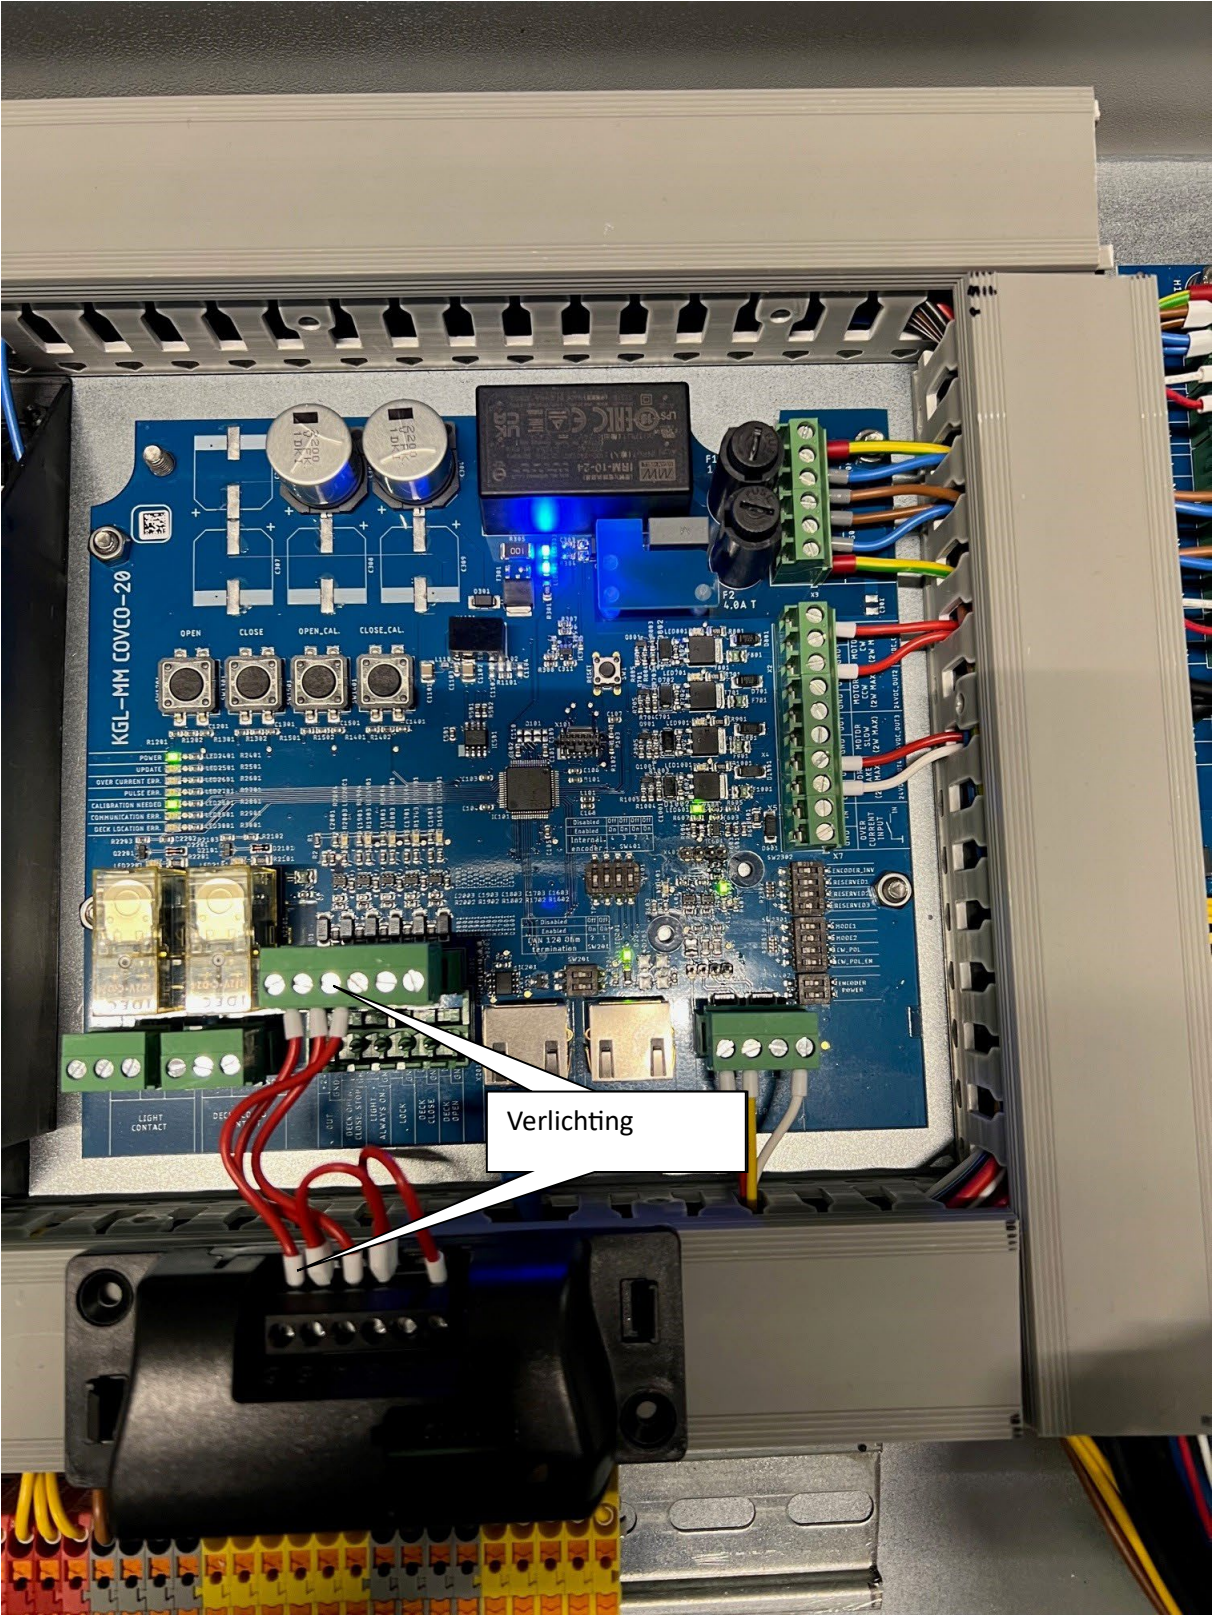


Verlichting


Afstandsbediening koppelen

Vervolgens gaan we de afstandsbediening koppelen aan de receiver. Het systeem moet hiervoor aan staan.


1. Druk een maal op de knop van de receiver, het rechtse ledje gaat nu groen branden.

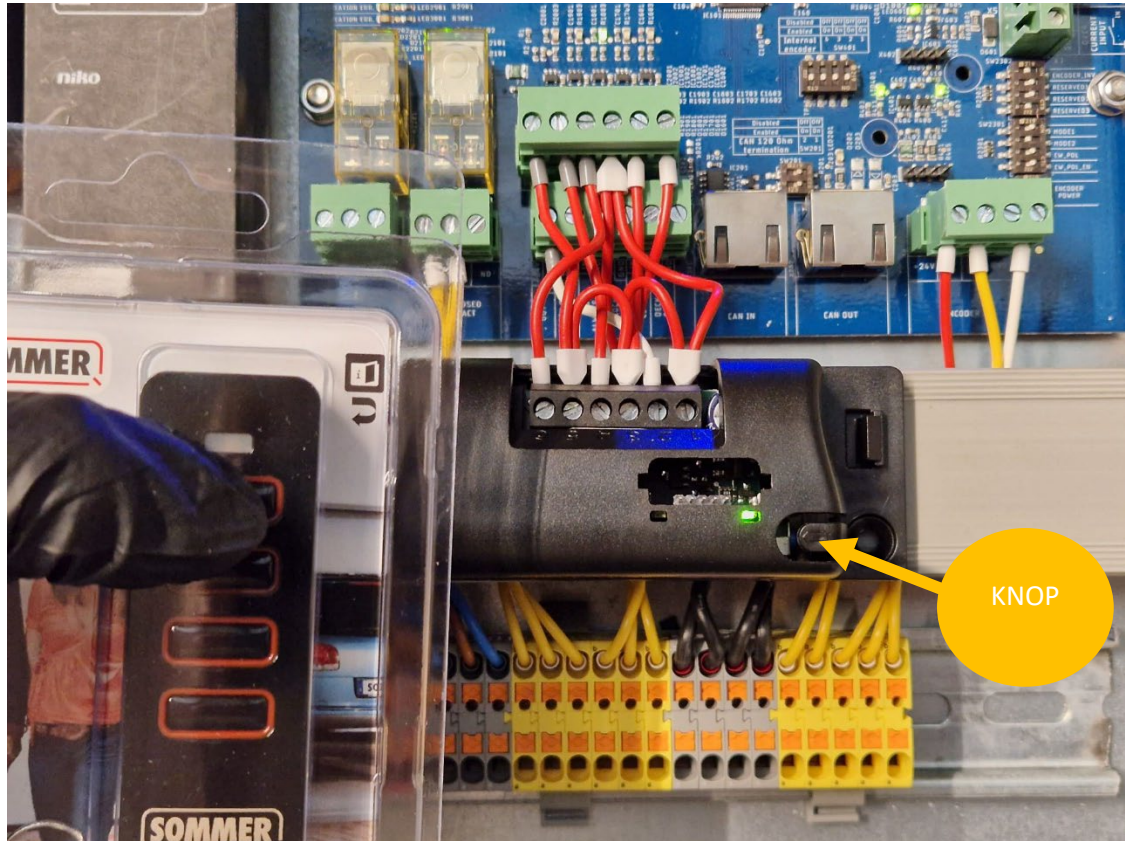


2. Druk vervolgens op de bovenste knop van de afstandsbediening, het ledje gaat knipperen en gaat vervolgens uit.

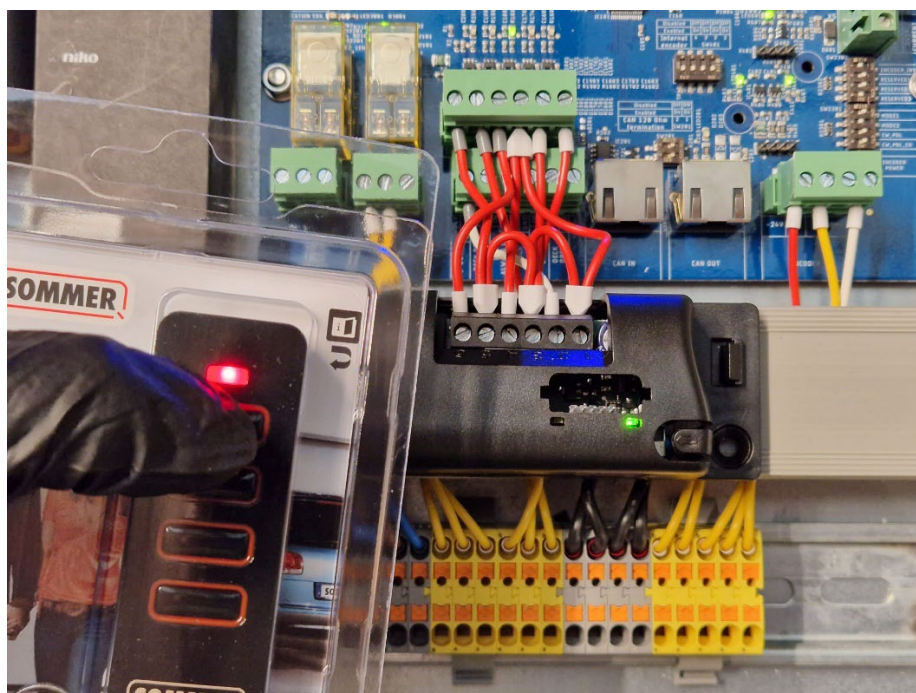



3. Druk vervolgens twee keer achter elkaar op de knop van de receiver, het linkse ledje gaat nu groen branden.

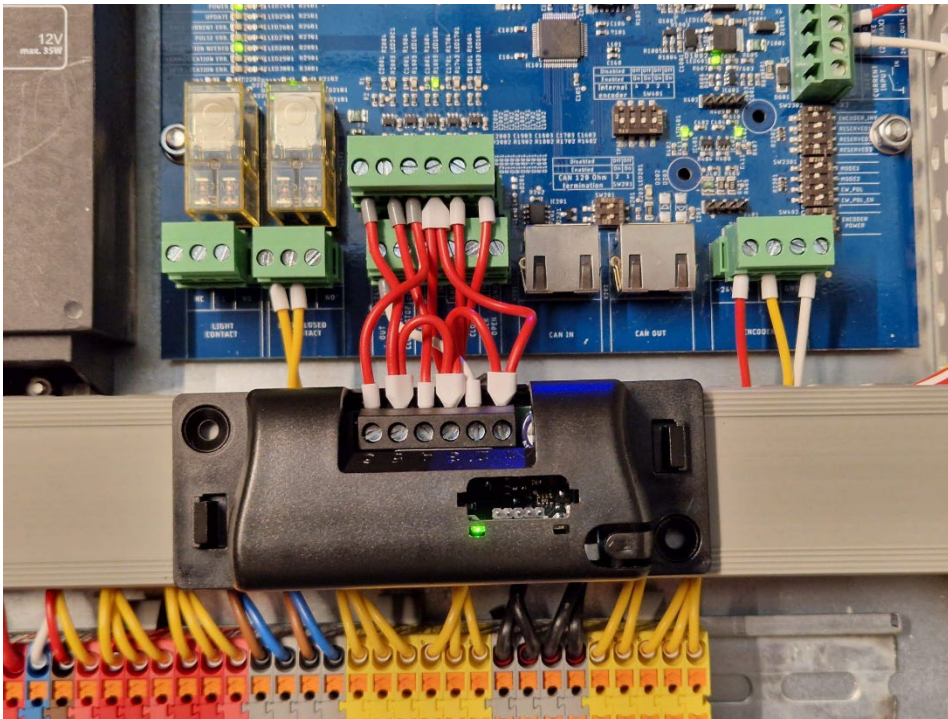


4. Druk op de tweede knop van boven op de afstandsbediening. Het ledje gaat wederom snel knipperen en vervolgens gaat deze uit.

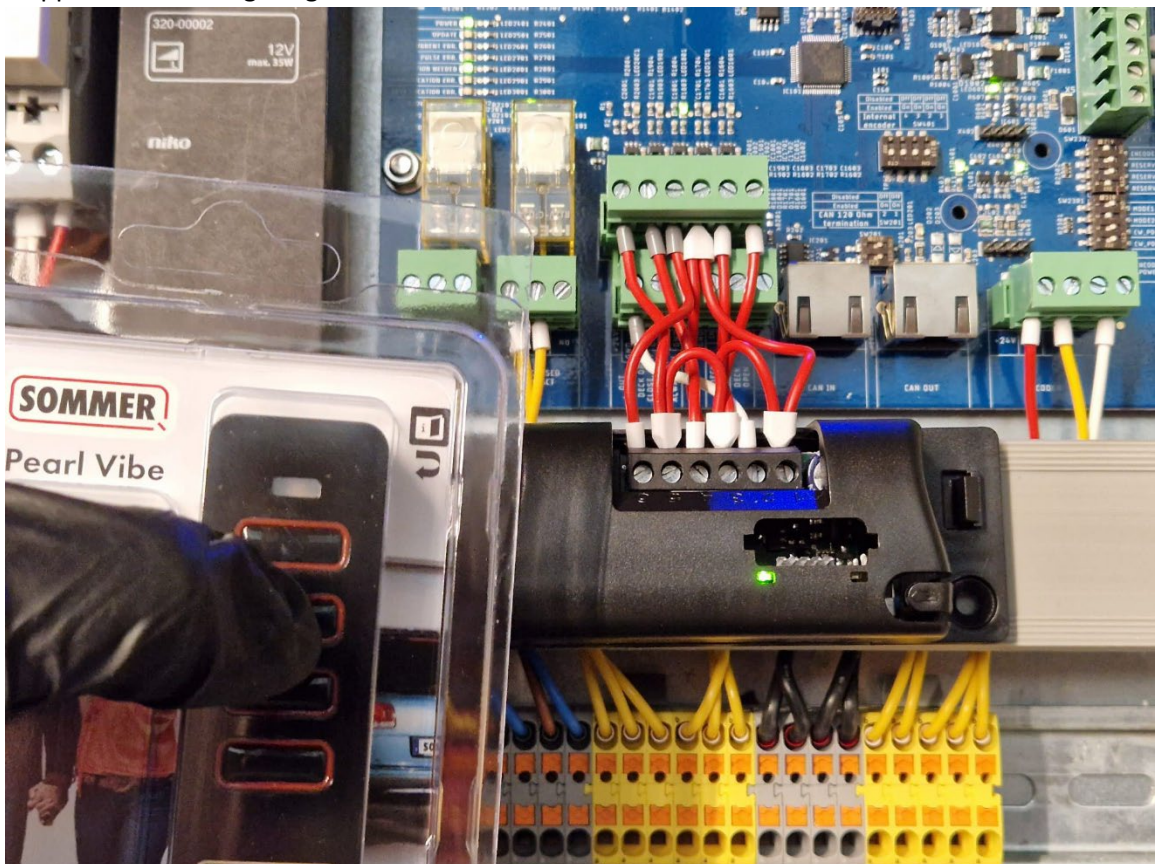

- De afstandsbediening is nu juist gekoppeld. Om dit te controleren kunt u de bovenste knop van de afstandsbediening indrukken, u hoort de receiver schakelen en het rechter ledje brand rood. Als u de tweede knop indrukt hoort u een relais schakelen en brand het linker ledje rood.

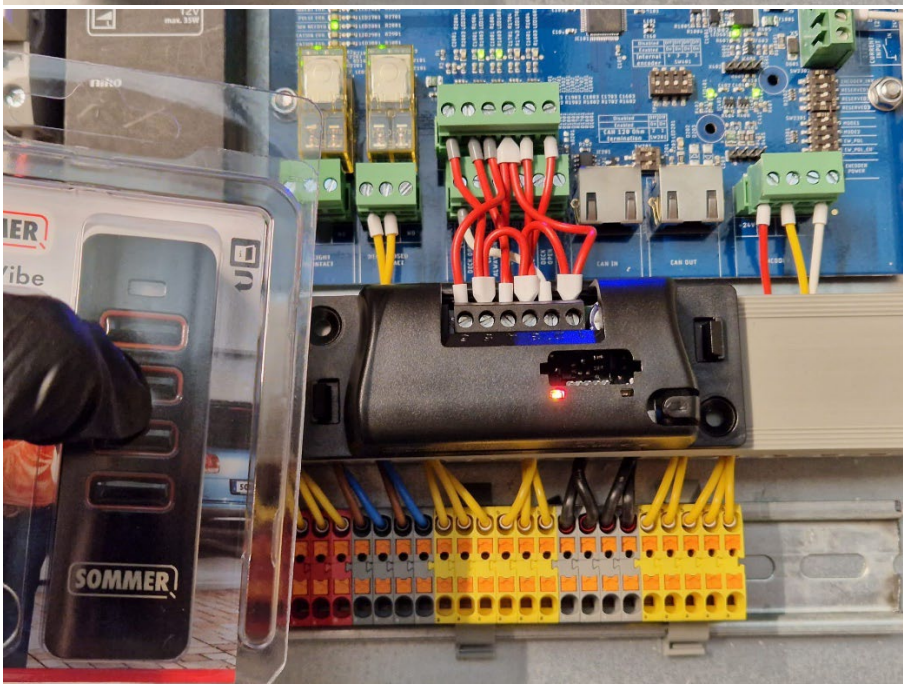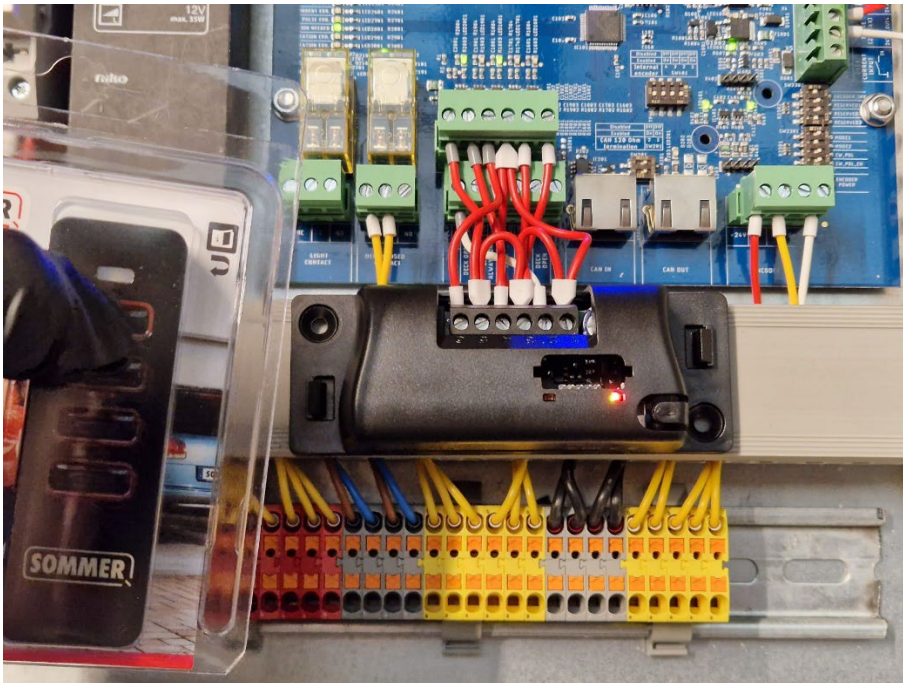


Gaan beide ledjes rood branden wanneer u een knop bediend? (zie onderstaande afbeelding)

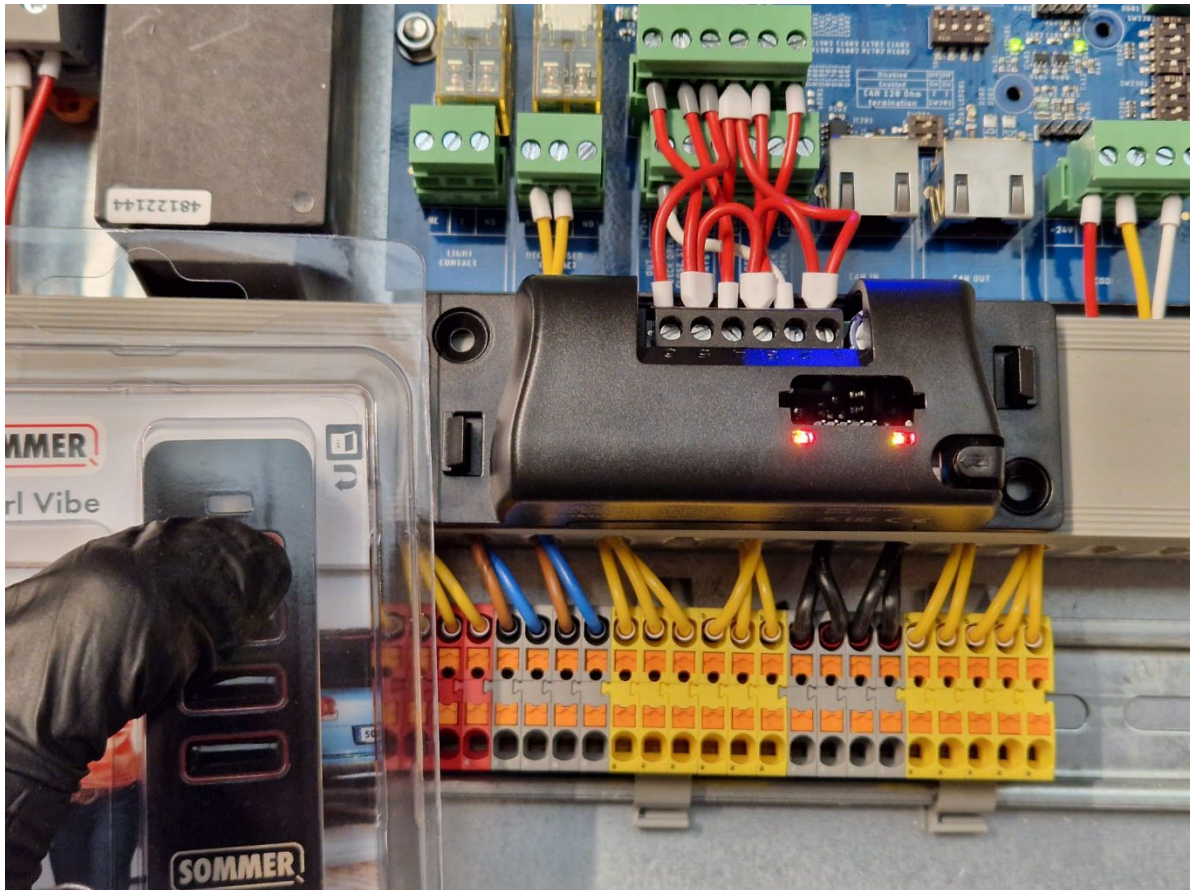

Dit betekent dat een knop gekoppeld is aan beide standen. Dit kunt u oplossen door de afstandsbediening te ontkoppelen. Dit werkt als volgt:

1. Houd de knop van de receiver ingedrukt tot het rechter ledje rood knippert. Druk vervolgens op de knop van de afstandsbediening die u wilt ontkoppelen.

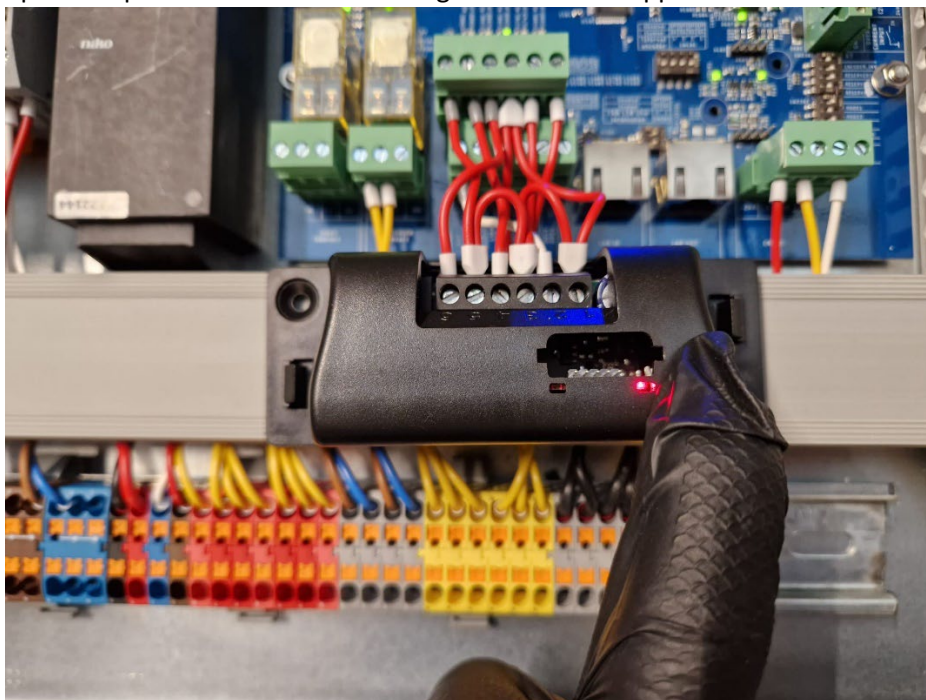

2. Als u een knop wilt ontkoppelen van de tweede stand, druk dan een maal snel op de knop, druk vervolgens nogmaals maar houd de knop ingedrukt. Houd deze ingedrukt tot het linker

ledje rood gaat knipperen. Druk vervolgens op de knop van de afstandsbediening die u wilt ontkoppelen.

